



- RG1 - Controller EKR-K KN3 NV
- V1, V2 - Triacs
- B - Thermostat with automatic reset
- C - Thermostat with manual reset
- A - Heating element
- X - User side contactors
- K1, K2 - Internal contactor
- S - User side circuit breakers
- TJ-K10K - Air temperature sensor
- T, J - User Control switches
- PTC - Air flow sensor
- PS - Air pressure switch

3x400V