



RG1 - Controller EKR K NV  
 V1, V2 - Triacs  
 A - Heating elements  
 B - Thermostat with automatic reset  
 C - Thermostat with manual reset  
 K1 - Internal contactor  
 R1 - Internal relay (Alarm)  
 PTC - Air flow sensor  
 PS - Air pressure switch  
 TJ-K10K - Air temperature sensor  
 S - User side circuit breaker  
 K - User side contactor  
 J, T - User Control switch